

Table of contents

	Document conventions	i
1	Introduction.....	1
	What this guide contains	1
	Other Resources and Manuals in this Series	2
	About HORIZON ^{mp}	3
	System requirements	3
	Installing HORIZON ^{mp}	4
	MicroPilot HORIZON ^{mp} Licence Key	4
	To Install the Licence Key	4
	MP1028 ^g - Enable.....	5
	Checking the Installed Licence.....	6
	Windows 7 & User Account Control.....	6
	Transferring a Licence.....	6
	Contacting MicroPilot	8
2	About HORIZON^{mp}.....	9
	The HORIZON ^{mp} window.....	9
	The Map	13
	Map Rotation Compass.....	14
	Auto- map rotation.....	15
	Map toolbar	15
	The instrument panel	16
	The Status bar	19
	The Video Window	23
	Menu Options and Other Features.....	23
3	Planning a flight.....	24
	Preparing maps	24
	The Map Selector Plugin.....	25
	Adding New Maps	26
	Setting Map Coordinates	26
	Reading from a file	27
	Entering map coordinates manually	27
	Select Map Coordinates dialog	27
	Navigating the map	28
	Using tie points.....	29
	Selecting Maps	29
	Setting the UAV Simulation Origin	29
	Selecting Digital Elevation Maps	30
	Supported DEM formats.....	30

Loading DEM Files	31
Adding Digital	31
Elevation Data to Horizon maps	31
Working with waypoints.....	32
Waypoint commands.....	33
Waypoint symbols	34
Fly files vs. Waypoint files	34
Fly files	34
Waypoint Files.....	34
To Add a Waypoint.....	35
Selected Waypoint Options shortcut menu.....	36
To Edit a Waypoint.....	37
<i>Edit Waypoint Options dialog box</i>	37
To Insert a Waypoint	38
To Move a Waypoint	39
Mission Types	39
To save a waypoint (.wpt) file	39
To change the mission type attached to a .wpt file.....	40
Examples	40
Identifying the waypoint sequence.....	42
Editing Flight files – The Flight File Editor	42
Create a new .fly file	43
Errors in flight files.....	44
4 Running Simulations	45
Why we simulate flights.....	45
Configuring simulations.....	45
UAV simulation settings	46
Simulation Start Position / UAV Origin.....	46
Conducting a Simulation	48
Simulating Failure Conditions.....	49
5 Conducting a flight	51
Communicating with the autopilot	51
To Transmit a Fly file or Waypoint file to the Autopilot	51
To Connect HORIZON ^{mp} to the Autopilot.....	53
Preparing for a flight.....	54
To fly or not to fly.....	54
Verifying autopilot operation	54
Flying with HORIZON ^{mp}	55
To start a flight	55
To fly in RPV mode	55
To fly in other modes.....	56
To move waypoints during a flight	56
Confirming the waypoint sequence.....	57
Drawing a Ruler on the map.....	57
Marking a location on the map	58
To Redirect the autopilot while in flight	58
To an existing waypoint...	58
To any point on the map.....	58
To Insert a Waypoint	59

Delete a Waypoint in Flight.....	60
Creating A New Waypoint File During Flight	60
To upload a waypoint file during flight	61
Camera Pointing Features	62
Camera Look Here.....	62
Camera Look At	62
Operating payloads.....	64
Button controls	64
Slider controls	64
Landing	65
Landing Release Feature	65
UAV-Ownership Feature	65
Additional Information.....	67
Synchronising Waypoints on Multiple GCS	68
Multi-UAV Selection	69
Identifying the Selected UAV	69
Failures.....	71
GPS Failure	71
6 Sensors–Understanding data	73
The Sensor Display.....	73
The trace route display.....	74
The strip chart display.....	75
User telemetry	75
7 HORIZON^{mp} Video	79
The Video Window.....	79
Video Window Tools.....	79
Video Capture	81
Main video stream.....	81
Second video stream	81
Image snapshot.....	81
To save a second video stream	81
To save a snapshot.....	82
To view a second video stream or snapshot	82
Supported Video Streams	82
8 Menu Options / Features	83
File Menu	83
New Waypoint File	83
Open Waypoint File	83
Save Waypoint File	83
Save Waypoint File As	83
Import Waypoint File	83
Close Waypoint File	83
View Last Simulation Log.....	83
Edit Menu	83
Edit Selected Object	83
View Menu	84
Transmission Errors	84
Camera Controls	84

Failure Controls	86
Simulation Speed	86
Sensor Monitor Displays	86
Extra Telemetry	87
Link Range Region Overlay	88
Altitude Range Overlay	88
Camera Projection Overlay	89
Region Key	89
Compass Arrow on Map	89
Camera History	90
Show Waypoint Altitude	90
Show Detailed UAV Icon	90
Show GCS Position History	90
Show Gains, Sensors, Waypoint	91
Clear UAV Bread Trail	91
Maps Menu	91
Show Map Selector	91
Show Range Settings	91
Show Overlay Settings	92
Zoom In / Zoom Out	92
Load Online maps	92
Change Map Type	92
Waypoint Menu	92
Generate Search Path	92
Restart Mission	93
Delete All	93
Edit Wpt	93
Launch Waypoint Editor	93
Refresh Flight File List	94
AutoPilot Menu	94
Reset Airspeed Sensor	94
Capture Waypoints	94
Start Datalog	94
Set Datalog as Downloaded	94
Change Mode	94
MP3X	94
Run Binding Utility	94
Tools Menu	94
9 Troubleshooting.....	97
Common problems	97
Autopilot Identification / UAV Name	101
ADC Calibrator	101
Aircraft Special Dfn Editor	101
Autopilot Config Test	101
Autopilot Configuration Wizard	101
Autopilot Datalog Viewer	101
Autopilot Flash Loader	101
Field Selector Utility	102
LRC AirConfig 2028	102
LRC AirConfig 2128	102

LRC GroundConfig.....	102
Modem Config.....	102
Buttons.....	102
Checklist	102
Dfn Editor	102
AVL Editor.....	102
Binding Utility	102
Compass Calibration.....	103
Cropcam	103
DGPS.....	103
Error monitor	103
Flight Monitor	103
GCS Tracker.....	103
GoTo Lat Long	103
GPS Signal to Noise.....	103
HeliStatus.....	104
Joystick Controller.....	104
Modem Configuration.....	104
Map Selector.....	104
NMEA Generator.....	104
Optimiser.....	104
Sensors.....	104
Status Monitor	104
Terrain Profile.....	104
Transponder.....	105
Autopilot Vibration Analyser	105
UAV Shape Editor	105
Visual Hardware Simulator	105
Waypoint Generator	105
Waypoint Grid	105

Appendices

A	Plug-In Tools for HORIZON ^{mp}	101
B	DEM Sources.....	106
Index	108	