

Table of Contents

Navigation	ii
Table of Contents	iii
Tables	vi
Figures	vi
1 Introduction.....	1
The MP2128 ^{LRC2} System	1
Order Options.....	1
Software Requirements	1
Remote Unit	2
LRC Base (Ground Unit).....	2
Contents of the Full LRC Package.....	3
MP2128 ^{LRC} System Concept	3
Priority of Control.....	4
2 LRC Remote Unit - Installation.....	7
Mounting	7
Weights and Overall Dimensions	8
IMU Location.....	9
Power.....	9
MP2128 ^{LRC2/Duo} Remote Unit.....	9
Remote Current.....	9
AGL Power.....	10
Servo Power input	11
Connecting your LRC2 Remote.....	11
MP2128 LRC2	12
Connectors.....	13
Front Harness.....	14
Rear Harness	16
Relay Outputs & ADC Inputs	16
High Current Drivers (Relays).....	16
ADC Inputs	19
3 LRC Base Unit.....	21
Weight and Overall Dimensions	21
Power.....	22
Connectors	22
Connecting the LRC Base Unit.....	22
Caution ! Trainer Cable.....	25
4 LRC Base Configuration.....	27
Before you Start	27

Mixing.....	27
Arcade Mode Not Always Usable with Earlier Firmware	28
Switching Between Arcade Mode & CIC-UAV Mode.....	28
Other Notes.....	29
Configuring the LRC Base using the LRC Base Unit Configuration Plugin ..	30
LRC Base Microcontroller Baud Rate Setting	32
Secondary Port Configuration.....	33
Using an External Base Modem	34
Accessing Internal Modems for Programming	34
Configuring your LRC Transmitter / Controller.....	35
LRC Transmitter CH5 Pulse Width	35
Restore Normal Base settings	38
Check the CIC/PIC Switching	38
RC Transmitter CH5 Pulse Width	39
Configuration for MP2128 ^{HELI} LRC	40
5 Communicating with Your LRC Remote.....	43
Communicating Directly with the Autopilot by Serial Cable.....	43
Communicating Over Modems, Using the LRC Base	43
Using HyperTerminal.....	43
Using HORIZON ^{mp}	45
6 LRC Remote Configuration	47
Configuring your MP Autopilot for LRC Operation	47
Failure Response Modes	49
Configuring the LRC Remote unit	49
Configuration Settings	51
Modems	52
7 Operation	53
Control Modes	53
Priority of PIC Control & other Control Methods.....	53
LRC Status Monitoring	54
Base Radio Modem Status LEDs	55
MP2128 ^{LRC2} Remote Status LEDs	56
Pre-flight Checks	57
Horizon LRC Status.....	58
8 Advanced Topics	63
Auxiliary Serial Port(s).....	63
Configuring the Auxiliary Serial Ports.....	64
General Purpose I/O Port.....	65
Using an MP-Dayview Camera with the MP2128 ^{LRC2}	66
Connect the MP-Dayview	66
Using a BOB Video Overlay Board with the MP2128 ^{LRC2}	66
Enabling Video Overlay Data on the GPIO Connector.....	66
Connecting a Video Overlay Board to Your MP2128 ^{LRC2}	68
Using an MP Novatel Remote GPS Receiver with the MP2128 ^{LRC2}	68
Loading Autopilot Firmware	69

9	Appendix	70
	Compass.....	70
	RC Transmitters.....	71
	CH5 Pulse Width	71
	Failsafe Receivers	72
	DSC/Trainer Cable Adapters	72
	Length of the DSC/Trainer Cable.....	72
	PPM Encoder	72
	Other Information.....	73
	Technical Support.....	73
	Troubleshooting	73
	HyperTerminal Communication	73
	LRC Remote.....	73
	Troubleshooting LRC-PIC control.....	74
	HORIZON ^{mp}	75