

Table of Contents

Document Conventions.....	iii
1 Introduction	1
About Logviewer	1
Features.....	1
The MicroPilot Datalog.....	2
Logviewer Settings	2
2 Downloading and Opening Files.....	3
To Download a Copy of the MP Autopilot Datalog	3
Download Options.....	3
Log File Name Format.....	7
Exporting Log files.....	8
Telemetry Files	8
Simulator Log Files	8
To Open a Datalog.....	9
To Open a Standard Telemetry File	9
To Open a User Telemetry File	11
To Open a Simulation Log.....	11
3 The Log Data Tab.....	13
Datalog table	14
The Log Plots tab.....	15
Log Plots Toolbar.....	16
Statistics Window.....	19
Fly File Window.....	20
VRS Editor Window.....	20
About the Graphs	21
Horizontal Position Plot.....	22
About the data tabs.....	24
Field Display tab.....	24
Notes about Plots	27
The User Defined Fields tab	28
Calculate Scale & Offset	29
Functions	30
4 Tips and shortcuts	33
Working with fields.....	33
Moving around the graphs	34
Selecting records	35
Heading Values	36
GPS Position	36
GPS Time	36

Restoring GPS Time from Datalog	36
Recording GPS Time (field 1224).....	36
Converting GPS Time Field Value to Seconds	37
Using GPS Time and GPS Pulse-per-second to Synchronise Datalog Entries.....	37
PID Contributions.....	38
Datalog Metadata file	39
Logviewer Settings.....	39
Troubleshooting Datalog Downloading	39
Index	41